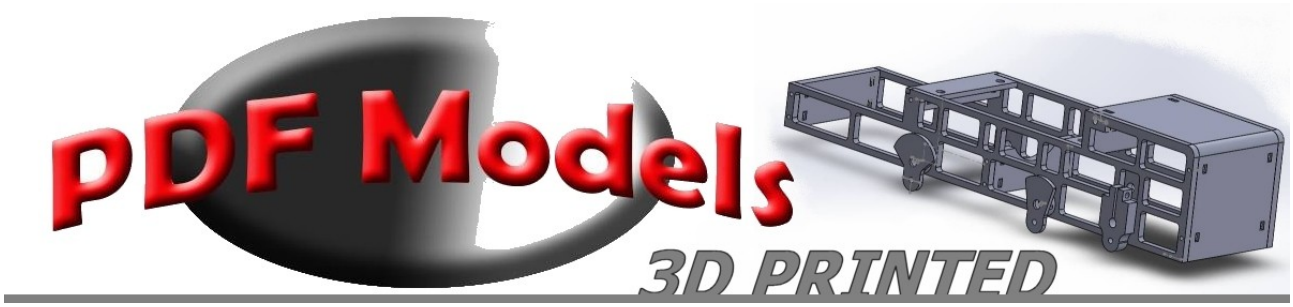



BEDFORD 'O' SERIES LWB FLATBED LORRY.

Thank you for buying this kit.
Please read all the instructions before assembly.



The first thing to do is to rub down all the parts you are going to paint with sandpaper and a small file in awkward places to get the worst of the grain off. You can use XTC-3D for best results or you can use spray paint from Halfords grey primer or filler primer. Witch ever you use Rub down with 500grit wet and dry. Spray primer and rub down again until you get a smooth finish. Then paint the colour of your choice (Halfords paint) .If there is any marks or imperfections rub down again with wet and dry. (Gloss paint will show this) then repaint.

CHASSIS

Bolt chassis parts together using 10 2mm x 8mm long bolts as shown in photo, glue the two beams to front of chassis 5mm at the front and the 6mm behind as photo

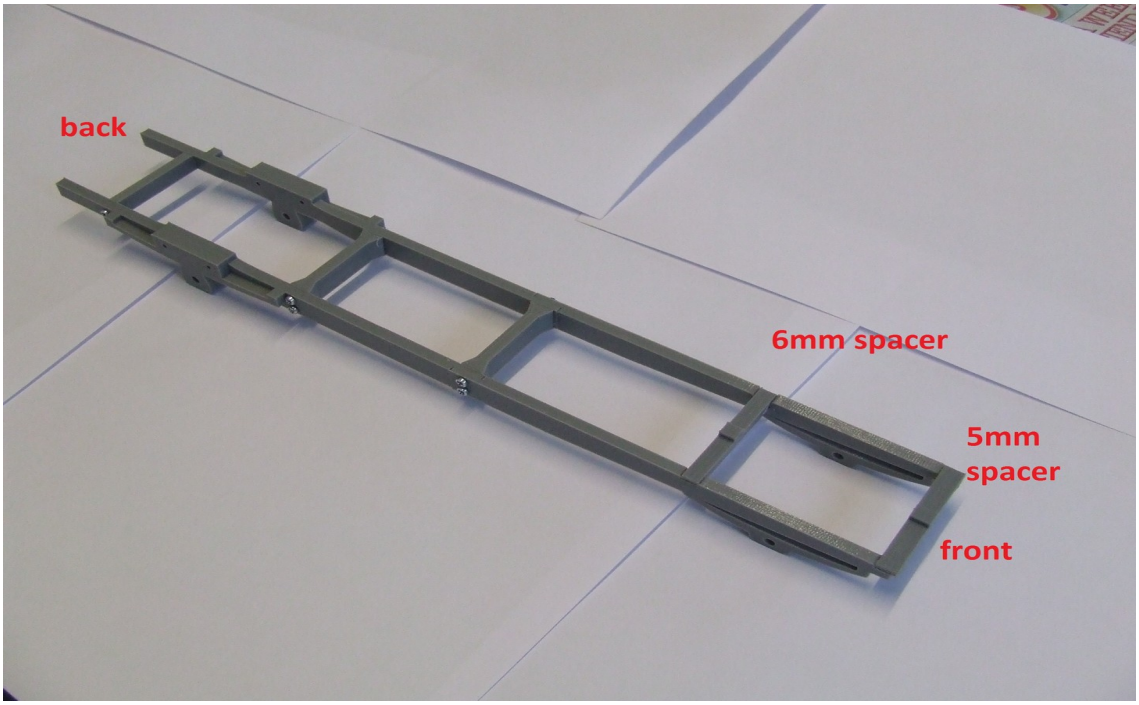


Next fit the rear wings with 4 2mm countersunk bolts. Next run a 3mm drill to clean out the holes making sure not to go through the wheels. Fit the 3mm axles and wheels with the spacers on the front axle. (Short axle at the front) Double wheels at the rear

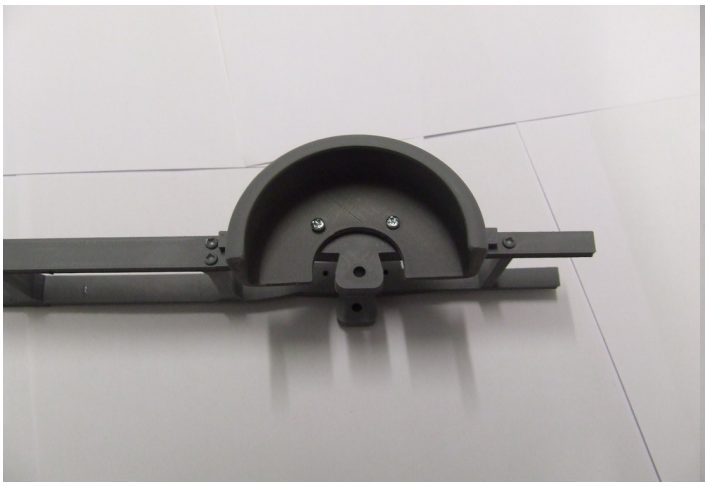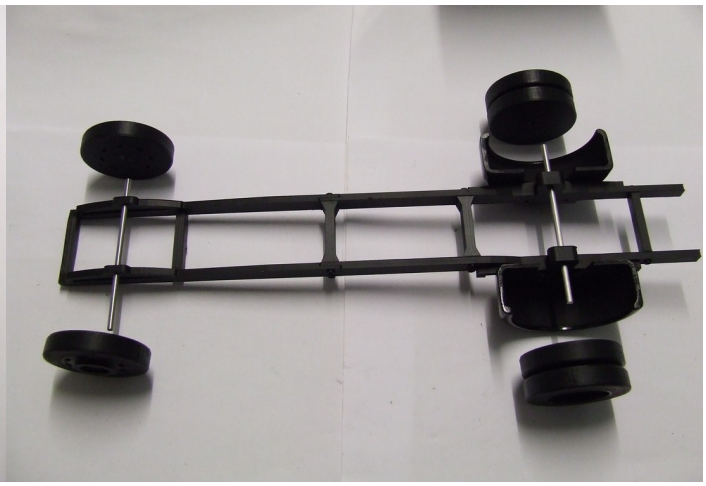
CAB

Clean up cab body, paint in primer then stick on the plastic strips as in photo using liquid poly glue. Glue overlays on sides of cab around door windows (Use Epoxy as the overlays are 3D printed) paint the body colour of your choice and front wings in black.

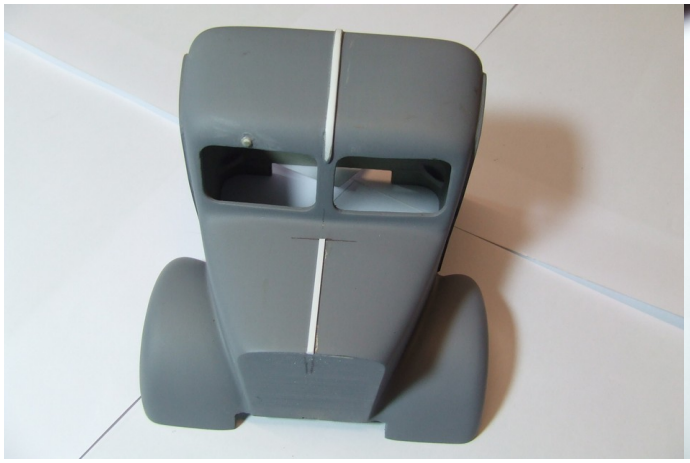



Drill holes for wiper, door handles, mirror, wiper, sidelights on front wings and bonnet catches and glue on the side grills on the side of the bonnet

.

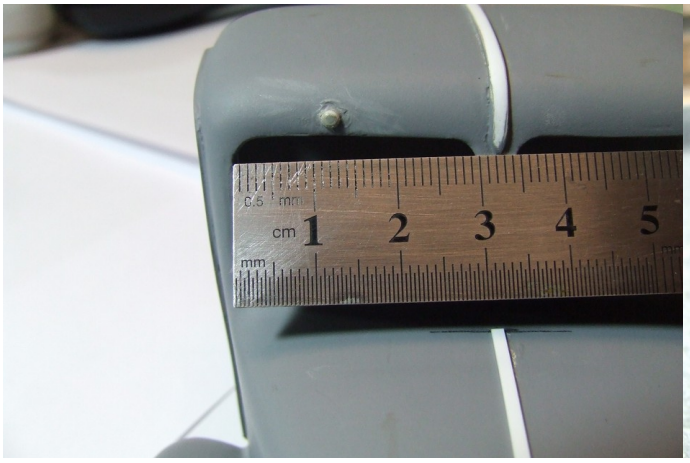




Check cab floor fits in cab body (file to fit) and test fit on the chassis Glue wire to steering wheel and glue in place on interior and glue seats in place after painting

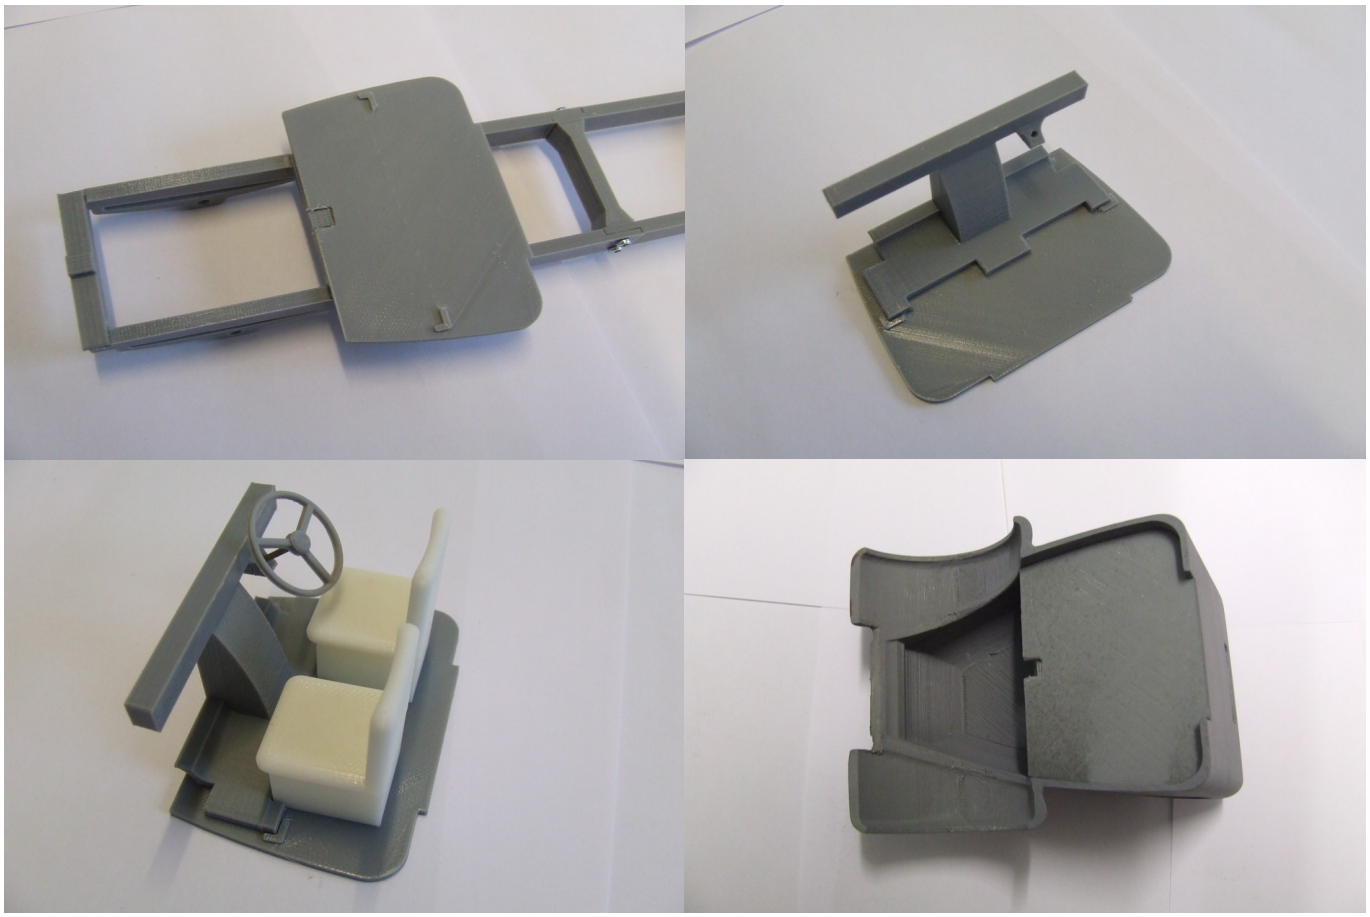

Cut and fit the glazing inside the cab (I used a clear Epoxy Rapid B&Q own make). then Glue floor into the cab making sure its up to the stops.
Next glue the cab to the chassis making sure the slot on the cab floor is pushed up fully.

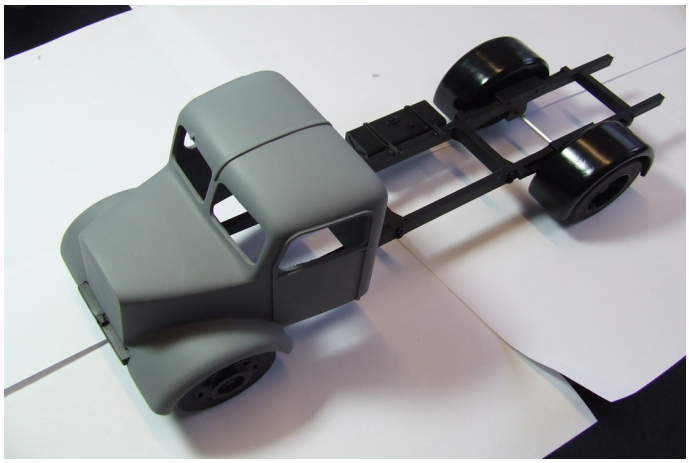



Take the front grill check the 1mm wire fits behind and into the headlights. After painting in primer glue plastic strip on front and glue radiator cap. After painting glue headlights lenses in place. Check fit onto cab and glue in place. Fit front bumper.






Next glue step supports as in photo then glue to underside of cab

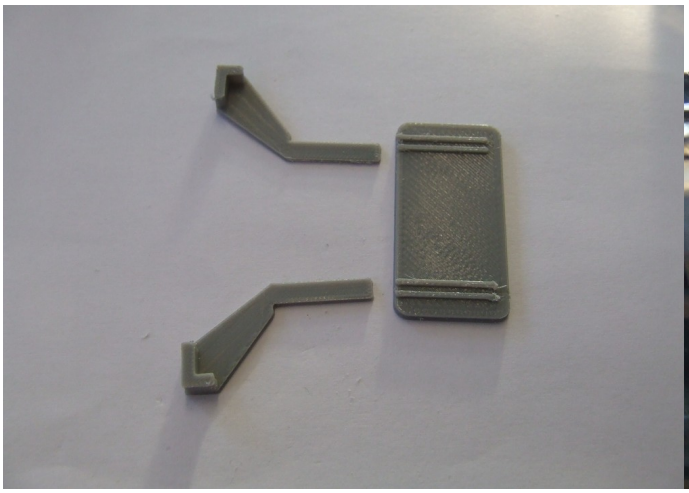

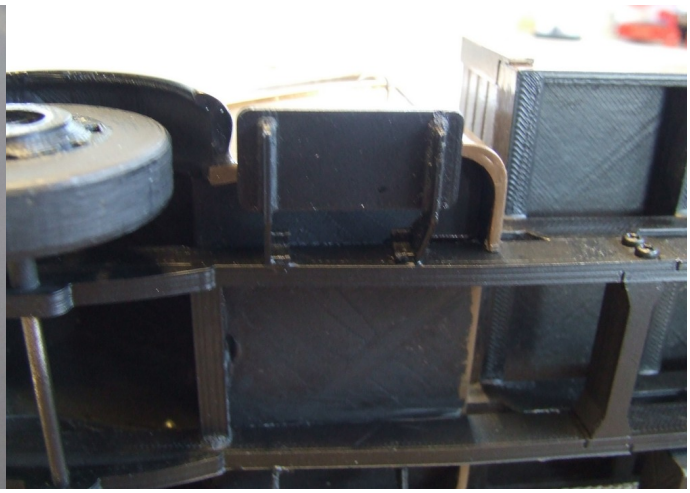

<u>FLATBED</u>

Glue runners to underside of flatbed with epoxy level at the rear of the floor. Then glue flatbed to chassis making sure you line up rear wings to wheel arch in flatbed

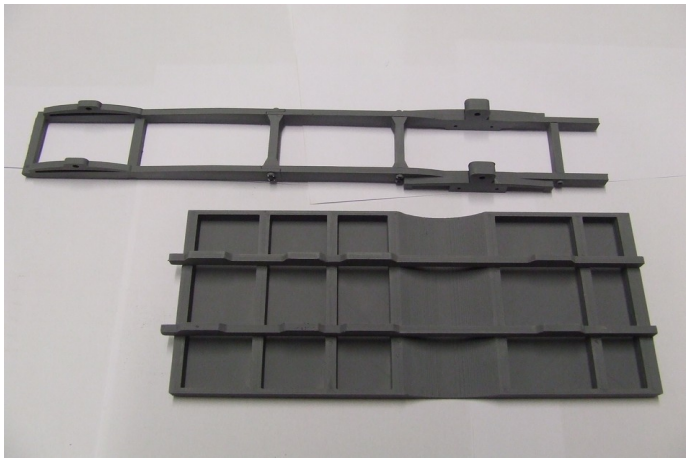


Next glue on the rear bulkhead as in photo




SPARE WHEEL REAR LIGHTS & SIDE LIGHTS

Glue the spare wheel carrier together, glue in spare wheel and fix to chassis behind rear axle.

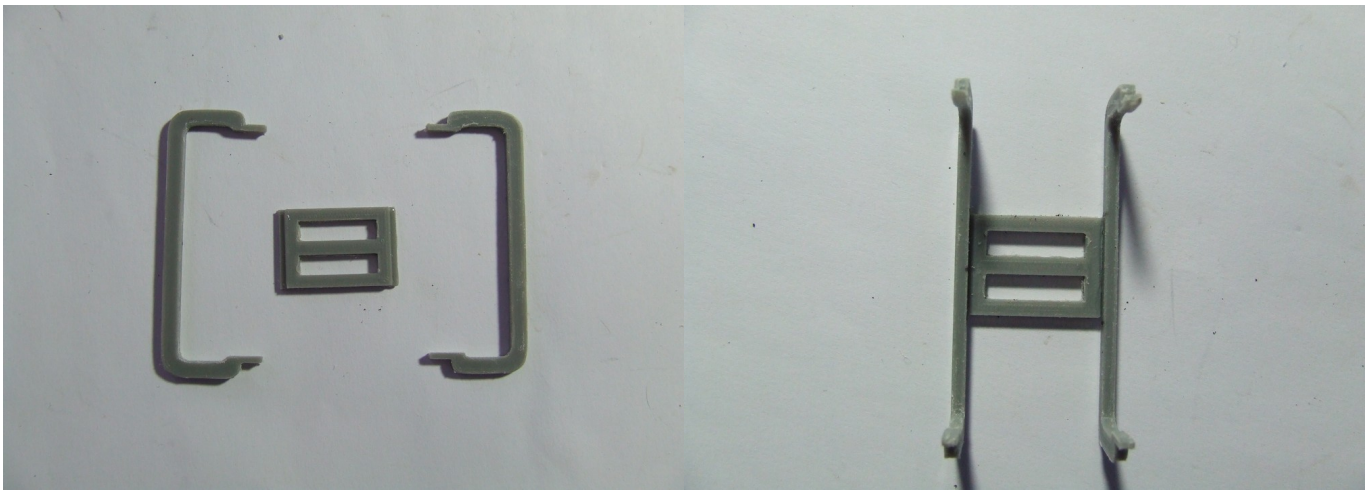


Drill 1mm holes in front side lights for piece of 1mm wire glue in place.

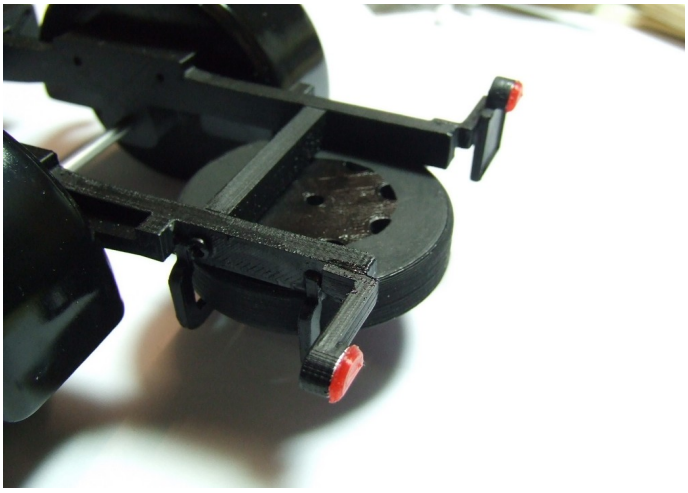







Next glue number plate bracket to the back and then glue lenses on rear lights and front side lights. (Paint silver underneath first then glue with clear Epoxy) Glue onto chassis as in photo.

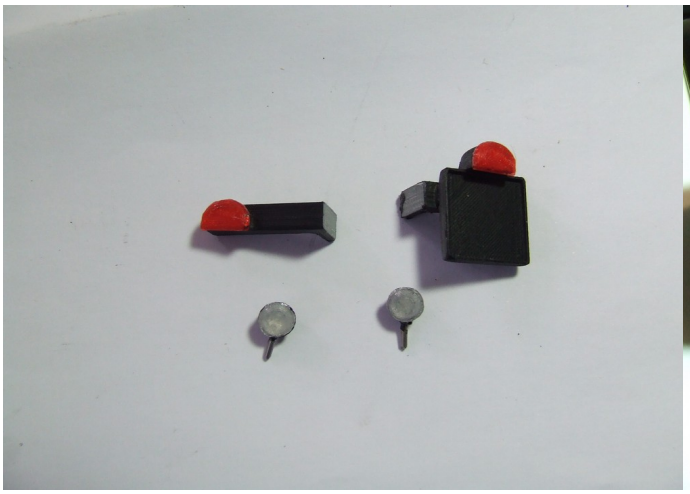


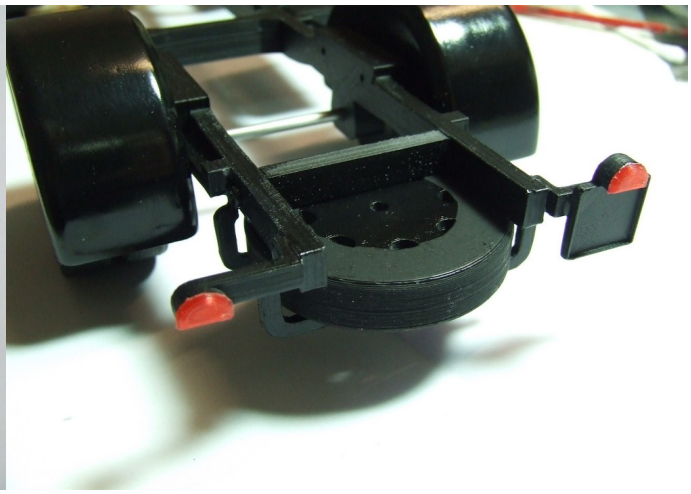

FINISHING OFF

Fit door handle and bonnet catches made from brass wire Fit wiper blade and door mirror.

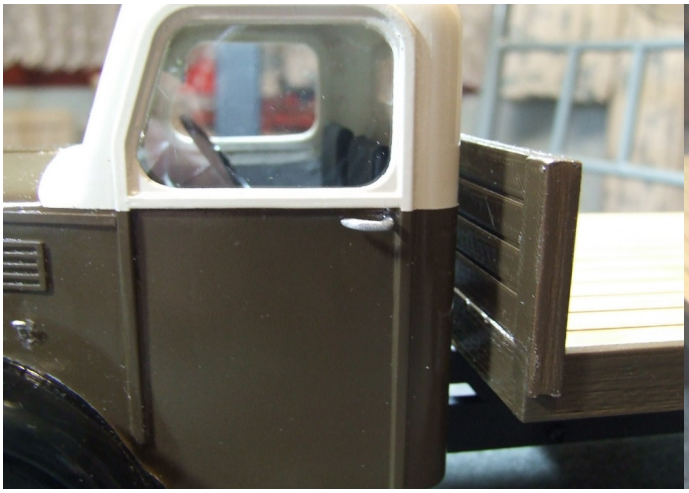

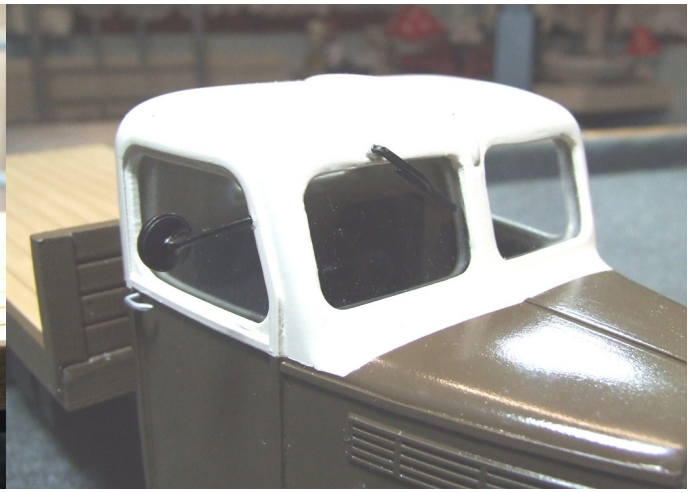



1:19 scale 16mm
BEDFORD 'O' SERIES LWB FLATBED LORRY



www.pdf-models.com